

THERMOSTAT INSTALLATION KIT ASSEMBLY INSTRUCTIONS

Tools required: hammer, punch and Phillips screwdriver

ASSEMBLY STEPS

Remove knock outs to create (2) openings in bottom of electric box **[A]**.

Remove locking rings from conduit connector **[C]** and cable connector **[D]**. (Cable connector **[D]** will hold the sensor wire (s). Do not insert sensor in conduit with lead wires).

Insert both connectors through knockout holes in electric box **[A]** and tighten locking rings until secure. Use coupling **[F]** to join conduit tubes **[E]** and **[G]** and tighten both locking screws securely.


Insert conduit tube **[E]** into conduit connector **[C]** and tighten locking screw securely. Insert plastic bushing **[H]** into curved end of conduit tubing.

Attached cover ring **[B]** to electric box using (2) corner screws provided.


Secure electric box and conduit to wall stud using appropriate hardware (not included).

Connect up to (4) heating mats in parallel using the (2) **WAGO**® connectors provided as shown below. Up to seven mats can be connected by purchasing (2) additional WAGO connectors.

PARTS

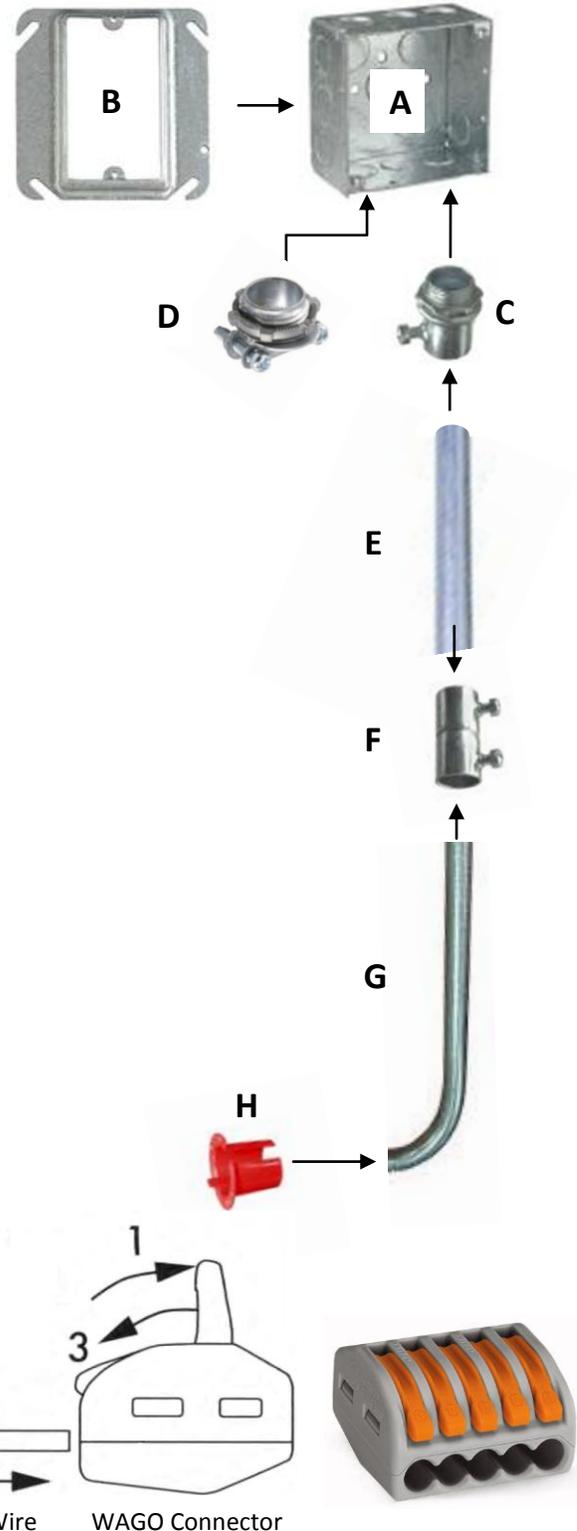

Up To 4 Heating Mats

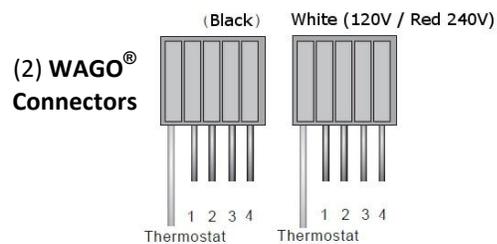

Up To 7 Heating Mats

